

INSTALLER
 REMOVE BOTTOM LABEL AND PLACE OVER
 ORIGINAL RATING LABEL AS SPECIFIED IN
 CONVERSION INSTRUCTIONS

THIS UNIT HAS BEEN CONVERTED TO NATURAL GAS

R9T0906

— REMOVE

FIRE PIT NATURAL GAS CONVERSION AND OPERATING INSTRUCTIONS

**INSTALLER: THIS MANUAL MUST BE LEFT WITH THE APPLIANCE.
 CONSUMER: KEEP THIS MANUAL FOR FUTURE REFERENCE.**

Tropitone Furniture Co., Inc.
 5 Marconi, Irvine, CA 92618
 1401 Commerce Blvd., Sarasota, FL 34243

Model 401800RD Rating: 25,000 BTU Serial No.

This product is equipped for LP gas fuel.
 For Outdoor Use Only. If Stored Indoors, Detach and Leave Cylinder Outdoors.

Do not install this product under any type of covering, including overhangs, patio covers, umbrellas, cabanas, tree limbs or branches. The risk of fire, inhalation of fumes, and exposure to excessive heat increases greatly if this product is installed under any type of covering, which could result in personal injury, damage to property or death. Install with a minimum 48" clearance on all sides.

⚠ WARNING
 Do not store or use gasoline or other flammable vapors or liquids in or near this or any other appliance. An LP (Liquefied Petroleum) tank that is not connected for use shall not be stored in or near this or any other appliance.

⚠ WARNING
 Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Refer to the owner's information manual provided with this appliance. For assistance or additional information, consult a qualified installer, service agency or the gas supplier.

The gas supply must be turned off at the gas supply when this appliance is not in use.

⚠ CAUTION
 The gas pressure regulator provided with this appliance must be used when operating with LP fuel. This regulator is set for an outlet pressure of 11 inches water column.

Certified to ANSI Z21.97-2010 Outdoor Decorative Gas Appliance
 Listing No. PMG-11114

R9T0936 Rev. A 23SEP15 © 2015 Tropitone Furniture Co., Inc.

— PLACE OVER
 THIS TEXT



WARNING

⚠ Improper installation, adjustment, alteration, service, or maintenance can cause severe injury or death and may result in property damage. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment. This document is a SUPPLEMENT to the Installation and Operating Instructions originally supplied with your Fire Pit.

WARNING

⚠ Tropitone recommends that all gas products installed in the USA and CANADA be serviced, maintained, and converted by professionals that are certified by the National Fireplace Institute (NFI) as NFI Gas Specialist or by the Wood Energy Technical Training (WETT).


WARNING

⚠ It is the installer's responsibility to ensure this product has been installed in accordance with all the local codes applicable and that the end user has been educated on the safe and proper operation of the unit. In the absence of local codes, please follow:

- For Fixed Piping Systems: *The National Fuel Gas Code, ANSI Z223.1/NFPA 54 or the International Fuel Gas Code.*
- For Electrical: *The National Electrical Code, ANSI/NFPA 70.*

Once your Fire Pit has been converted to Natural Gas, please locate the small silver label and remove the bottom strip. Place this strip over the section indicated above, on the large label located on the inside right door.

© 2019 Tropitone Furniture Co., Inc.
 5 Marconi, Irvine, CA 92618
 1401 Commerce Blvd., Sarasota, FL 34243
www.tropitone.com

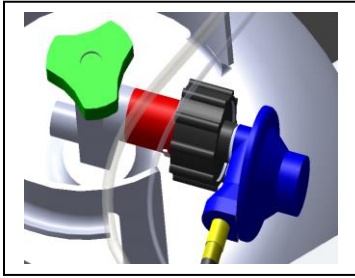


First turn the LP Gas tank (if installed) fully off by rotating the valve completely to the right until closed. Then disconnect the LP Gas tank hose with built in regulator (shown in blue) by turning the large connector (shown in black) fully counter-clockwise until the hose is completely disconnected.

The proper pressure and gas type must be checked prior to installation. A 1/8" NPT test port is provided at the burner assembly connection beneath the burner tray. When converting from LP to Natural gas, installer must remove the supplied gas hose and LP regulator and install the correct regulator for Natural gas. The regulator must limit the supply as specified below:

Natural Gas:

- Supply Pressure:
- Minimum 5.0" WC (water column), Maximum 10.0" WC


- Operating Pressure:
- Minimum 5.0" WC, Maximum 7.0" WC

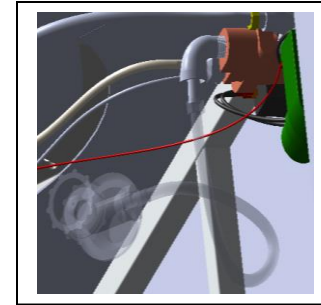

Remove the LP Gas tank hose from the gas valve (shown in bronze) at the elbow coming out of the gas valve as shown above. Connect your inlet supply line, including pressure regulator to this location. Follow all local codes. Do not install without a regulator, which will limit your fuel supply to 5 inches of water column.

CAUTION: Use a joint compound or thread tape approved for the type of gas this appliance is intended to use on all male threads EXCEPT compression threads. Never apply thread tape or compound to compression threads.

Beneath the Burner tray, locate the Gas/Air Mixer in the plumbing. Remove the LP Gas/Air Mixer and replace with the Natural Gas Orifice

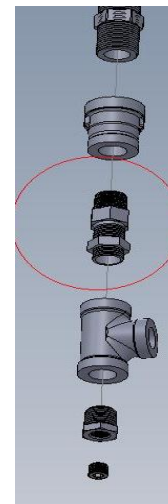

LP Gas/Air Mixer

Natural Gas Orifice